



30 Constellation Court
Toronto, Ontario, Canada
M9W 1K1
TEL: 416-679-1171
FAX: 416-679-1150

Disconnecting the Casement Window Restrictor

Equipment Required: Blade (Flat) Screwdriver



Step 1: With window opened to full restrictor travel, set the screwdriver into the restrictor clip as shown.

Restrictor Clip



Step 2: Push outwards until clip releases.

Restrictor Clip



Disconnecting the Casement Window Restrictor (Continued)

Step 3: Lift the connecting bar. Window is now unrestricted.

Connecting Bar



Step 4: To reconnect, lower the connecting bar onto the stud in the frame and push the clip inward until it locks onto the stud.

Stud in frame

